




# DDS Installation Guide

## ■ By USB

- 1 Prepare a USB which memory capacity is more than 4GB
- 2 Insert USB into USB terminal of DDS
- 3 You will see “reading out” and “loading” on monitor first. It will complete in 25 secs.
- 4 Take USB out of DDS
- 5 Insert USB into computer. There are four folders.

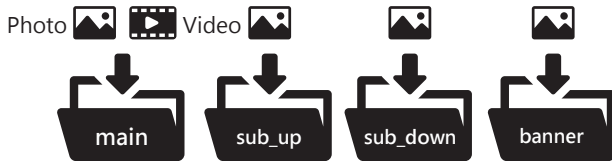

- 6 Open “defaultText.txt” in main folder by Notepad. Edit words for marquee. One sentence for one line.
- 7 Insert USB into USB terminal of DDS again.


**Diagram**

banner	
sub_up	main
sub_down	
defaultText	

File system of USB must be FAT32, if not, please format it to FAT32.

## ■ By Internet

**Diagram**

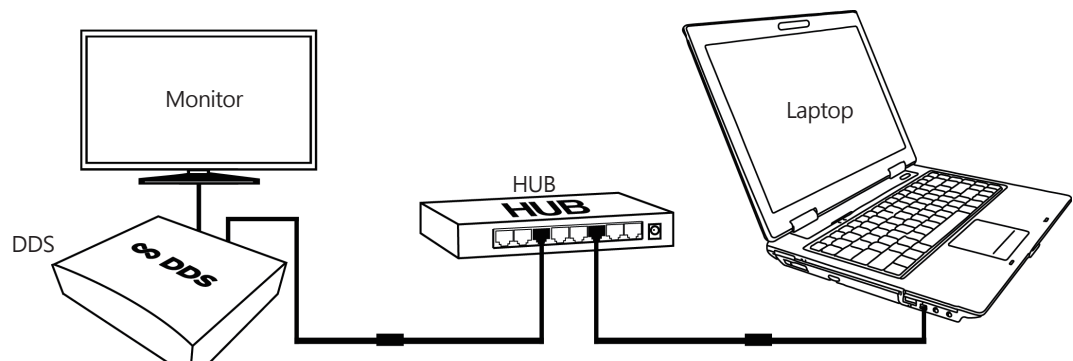

### 1 Hardware connection

- (1) Insert network cable and power into LAN and DC of 「DDS」
- (2) Connect to 「HUB」
- (3) Make sure PC or laptop is connecting with 「HUB」

### 2 Modify network settings of computer

- (1) Control panel → network and internet → network and sharing center → modify interface settings → Ethernet, select content by clicking right button of mouse → select internet communication protocol fourth version (TCP/IPv4)
- (2) Set the settings as following. IP: 192.168.1.150; default gateway server: 192.168.1.1

### 3 Login website for managing DDS

- (1) Use browser Internet Explorer or Google Chrome
- (2) Connect to <http://192.168.1.159:8080>
- (3) Enter account and password

Website default	
ADD	<a href="http://192.168.1.159:8080">http://192.168.1.159:8080</a>
ID	admin
PWD	admin